



4F-1, 236, Fu-Te 2nd Rd., His Chih,

Taipei Hsien, 221, Taiwan

TEL:886-2-6616-6692 · 2694-6687

FAX:886-2-2694-6875 · 2694-5097

Pinch Roller Changing Process

RX/RX II

Revision History :

Version	Date	Page	CONTENTS
1.0	May 24, 2014		First release
2.0	Sept. 16, 2015		Add RX II


Tools Required:

- Phillips screwdriver

1. Pull down the Pinch Roller lever switch.




2. Behind of the machine, on right side use Phillips screwdriver to loose the screw shown as below picture and remove the metal racket.

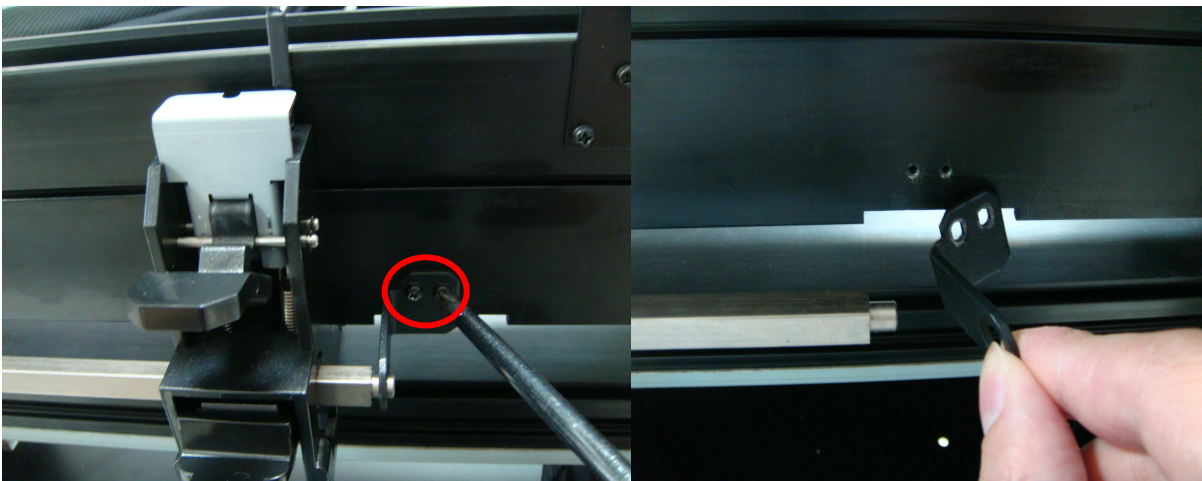


3. Push to right side; take out the Pinch roller from the slot on rail.



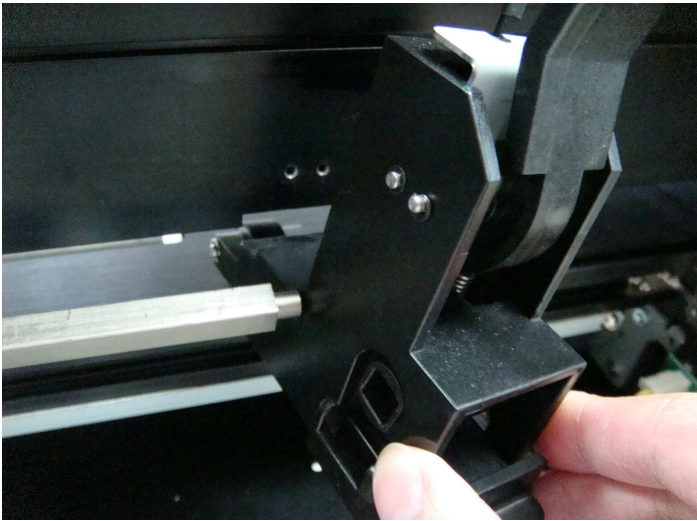


4. Take out the pinch roller set.

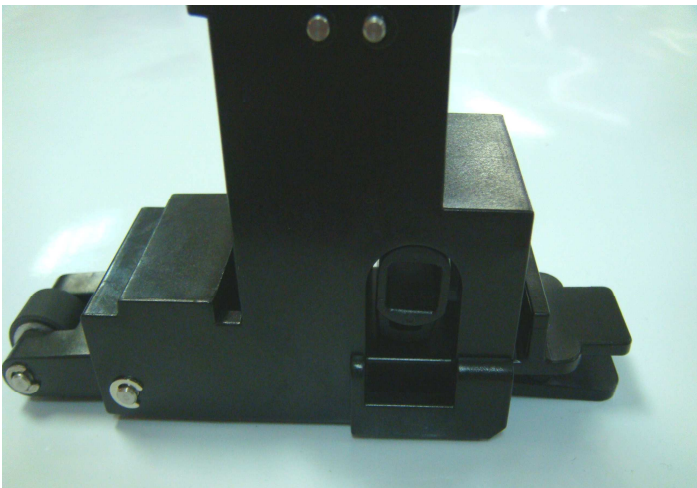

Installation Note:

Before insert the pinch roller set,

1. Make sure the cam roller is at “disable” position. (Point down)

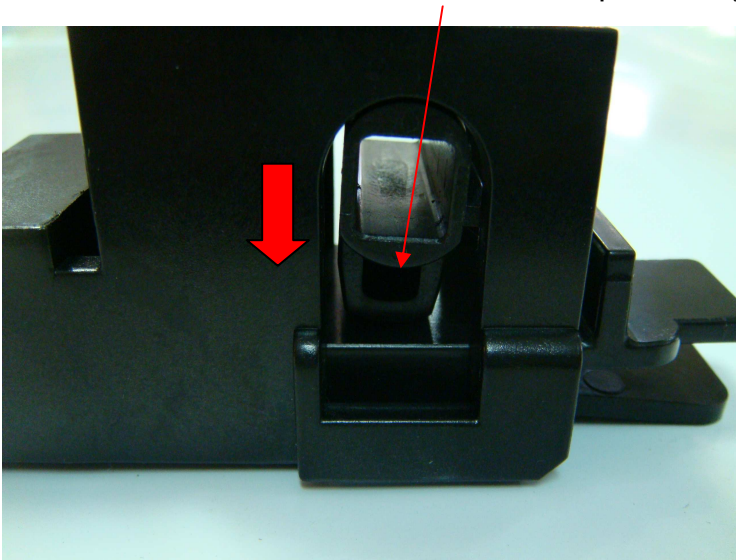

2. Make sure the pin is at slot.

