



Innovation
With a Human Touch

4F-1, 236, Fu-Te 2nd Rd., His Chih,

Taipei Hsien, 221, Taiwan

TEL:886-2-6616-6692 · 2694-6687

FAX:886-2-2694-6875 · 2694-5097


X Motor & X Motor PCB Changing Process Mercury III

Version: 1.0
May 20, 2014

Revision History :

Version	Date	Page	CONTENTS
1.0	May, 20 2014		First release


1. Open the top window, and loosen eight screws inside, then you can remove the whole top cover. (please refer to below pictures)

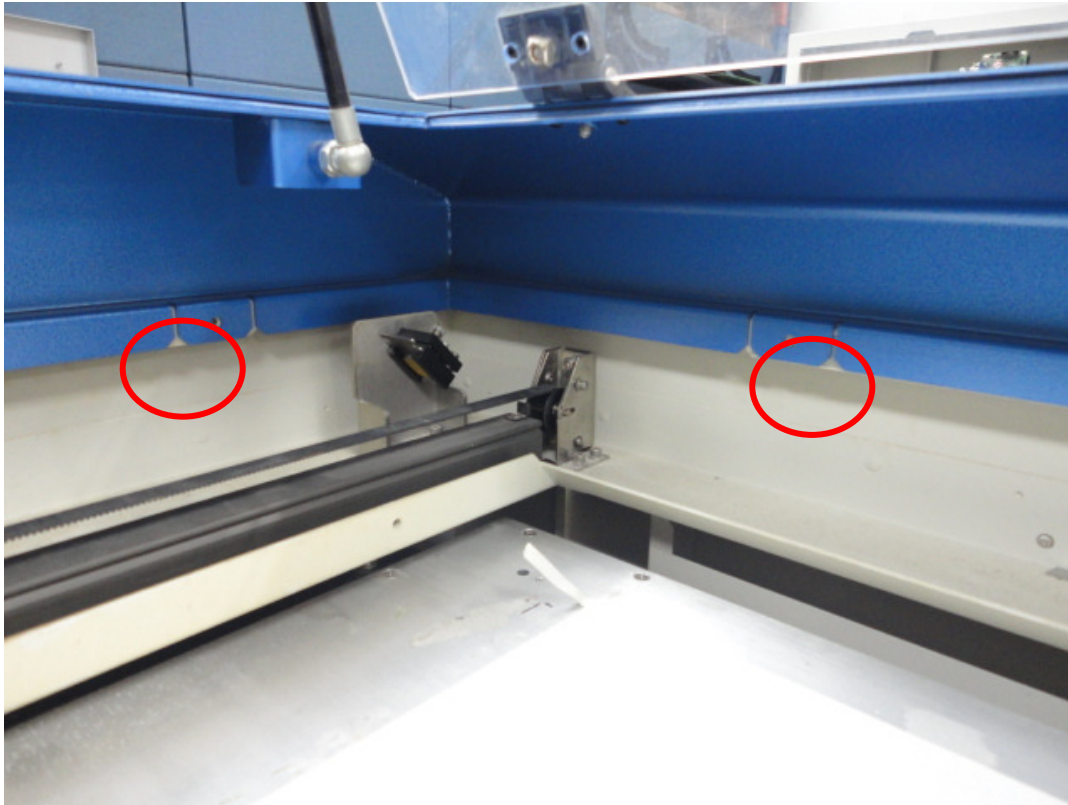


2. Move the top cover away and it will be easier to replace x motor




3. Remove x motor power cable and signal cable and loosen the x motor belt tension cable.

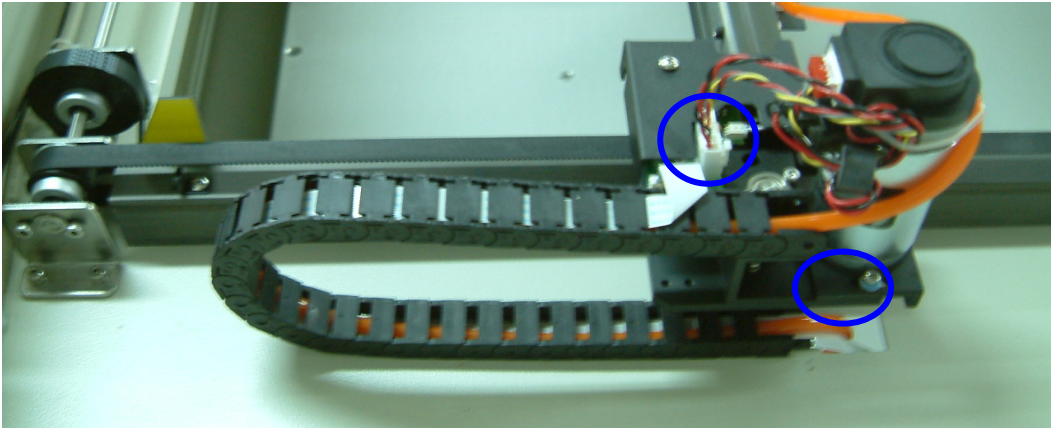

4. There are four screws on the bottom of x motor. Remove these four screws and the x motor can be removed and changed new one.

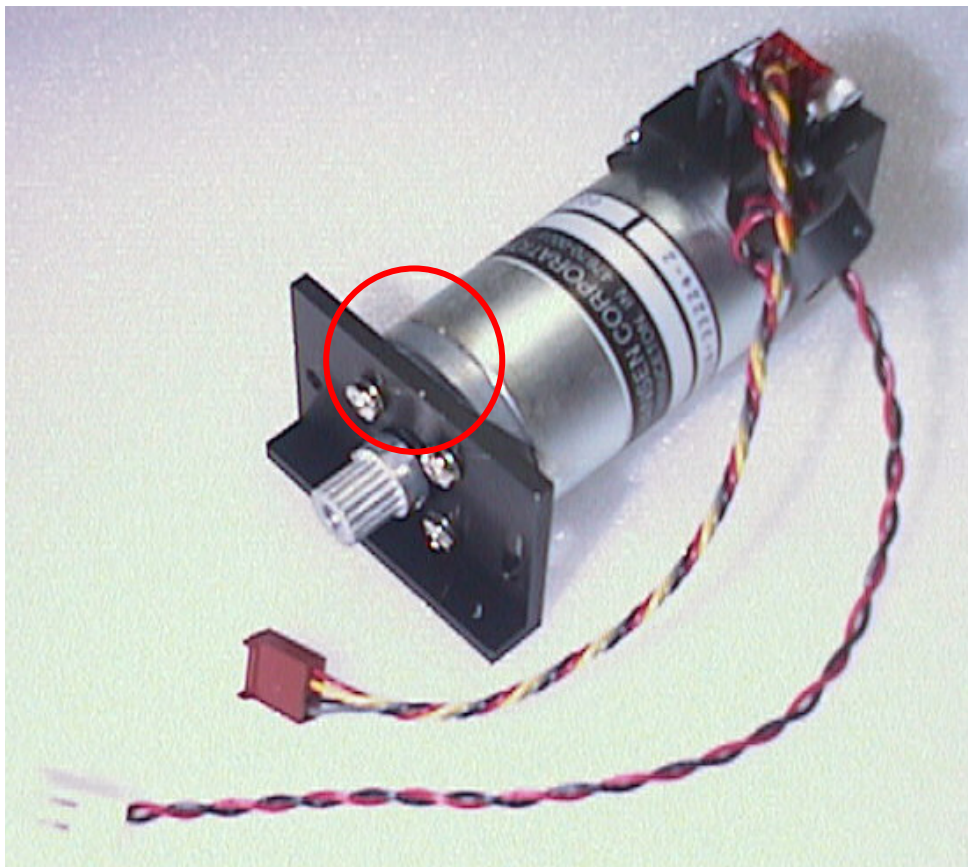

5. Remove three screws on x motor PCB cover.

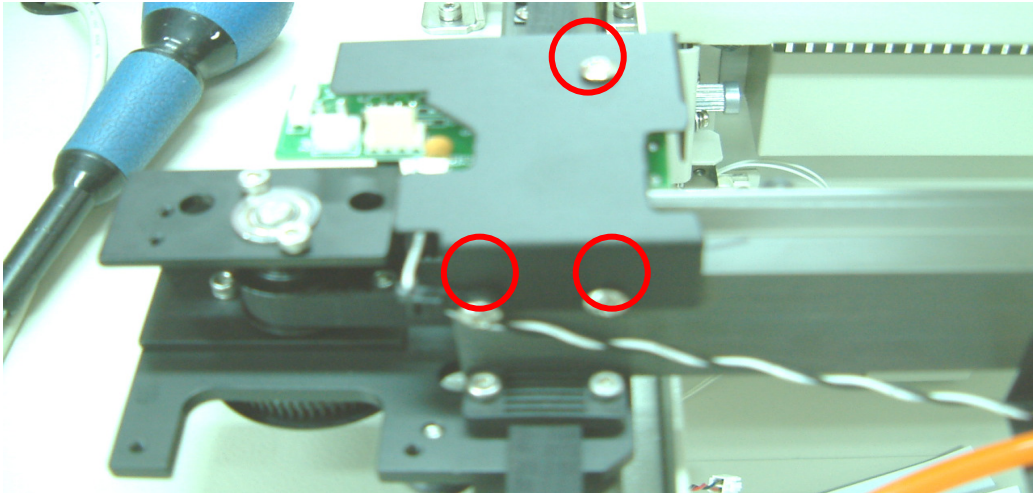

6. Then loosen two screws and unplug the x motor flat cable and auto focus cable. The x motor pcb can be removed.

